

PARTS LIST 12

Index

| | Page Nos. |
|----------------------------|-----------|
| Introduction | 2 |
| Model Identification | 3 |
| Parts List | 3-6 |
| Bill of Material | 7 |

| System | Sub-System | Description |
|---------------|-------------------|---|
| 01.11 | 01.11.3/4/5 | Glass Frames & Mechanism |
| 01.11 | 01.11.5 | Glass Frames & Mechanism |
| 01.12 | | Instrument Panel & Console |
| 01.13 | | Interior Ornamentation |
| 01.14 | 01.14.3 | Door Handles, Locks & Mechanism |
| 01.14 | 01.14.3 | Door Handles, Locks & Mechanism |
| 01.14 | 01.14.3 | Door Handles, Locks & Mechanism |
| 01.15 | | Exterior Ornamentation |
| 01.16 | | Windshield Wiper & Washer |
| 01.16 | | Windshield Wiper & Washer |
| 01.18 | | Body Paint |
| 01.20 | | Safety Restraining |
| 02.03 | | Engine Mounting |
| 03.00 | | Engine |
| 03.02 | 03.02.1 | Engine Lubrication – Filter etc. |
| 03.02 | 03.02.1/2/3 | Engine Lubrication – Oil Tank & Seal |
| 03.02 | 03.02.4 | Engine Lubrication – Gasket |
| 03.03 | | Engine Cooling |
| 03.03 | | Engine Cooling |
| 03.04 | 03.04.1/2/4 | Induction Air – Intercooler – Air Cleaner Pipes |
| 03.04 | | Throttle |
| 03.06 | | Engine Starting |
| 03.07 | | Engine Ignition |
| 04.01 | 04.01.1 | Front Suspension – Members |
| 04.01 | 04.01.1 | Front Suspension – Members |
| 04.01 | 04.01.1 | Front Suspension – Front Anti-Roll Bar |
| 04.01 | 04.01.1 | Front Suspension – Front Anti-Roll Bar |
| 04.01 | 04.01.1 | Front Suspension – Wishbone Upper |
| 04.01 | 04.01.1 | Front Suspension – Wishbone Upper |
| 04.01 | 04.01.1 | Front Suspension – Wishbone Lower |
| 04.01 | 04.01.1 | Front Suspension – Wishbone Lower |
| 04.01 | 04.01.2 | Front Springs |
| 04.01 | 04.01.3 | Front Hubs |
| 04.01 | 04.01.3 | Front Hubs |
| 04.02 | 04.02.1 | Rear Suspension Members – Frame |
| 04.02 | 04.02.1 | Rear Suspension Members – Frame |
| 04.02 | 04.02.1 | Rear Suspension Members – Frame |
| 04.02 | 04.02.1 | Rear Suspension Members – Frame |
| 04.02 | 04.02.1 | Rear Suspension – Rear Anti-Roll Bar |

PARTS LIST

Introduction

Because the RS200 is only being built in limited numbers, and because there are so many special features in its design, we have included a complete list of all the parts, component assemblies, used to build the standard car.

Accordingly if the RS200 owner needs replacement parts for his car, even though it is normally housed many miles away from a specialist FORD motorsport dealer with expert knowledge of the model, he will be able to identify these parts, accurately, and secure replacements.

The list of parts printed below not only describes each item, and the number of them which are used in one car, but it defines each item in two different ways. One of these is the Part Number, and the other is the company's Finis Code.

Here is an example of the way that a component may be described:

| | |
|----------------|--------------------------|
| 68 VB 2K016 AA | (This is the Part No.) |
| 1561895 | (This is the Finis code) |

If the Finis Code starts with the numbers: 909... , this means that the part is a special Motorsport item, and is serviced only by:

**Ford Motor Company Limited,
Motorsport Parts Division,
Arisdale Avenue,
South Ockenden,
Essex,
England. RM15 5TJ
Telephone: 0708-858512
Telex: 897007**

Should you or your dealer encounter difficulty in the supply of any Motorsport parts please call the RS200 24 hour - 'Hot Line' Answerphone Service - Telephone: 0708-858318.

Parts carrying any other Finis Code should, however, be serviced through the normal Ford service network, and not through Motorsport Parts.

Identification of FORD parts from other models

Every Part Number starts with a four-character, or five-character, prefix, which defines the model year, and the Ford vehicle, on which it was first used.

In the example quoted, therefore, the prefix 68 VB refers to a part first used in the 1968 model year. VB, in fact, was the Ford Transit.

Some Part Numbers begin with the letter 'H'. This denotes a special motor sport item, rather than one used on a 'mainstream' Ford product.

Model Identification

All European FORD Cars, and light commercial vehicles, are identified in the following way:

The First prefix letter refers to the vehicle product range.

The Second prefix letter refers to where it was built, or to the Assigning Location. In many cases this is also the location which had design responsibility for the item:

B = Britain, G = West Germany, and M = Motorsport

The various FORD models are as follows:

| | |
|---|------------------|
| Escort/Orion | { AB AG AM |
| Sierra | { BB BG |
| Capri | { EB EG |
| Fiesta | { FB FG |
| Granada | { GB GG |
| Overhead camshaft (German) engine range | HM |
| RS200 (ex-Escort RS1700T part) | MS |
| RS200 (special part) | PB |
| General Service part | SX |
| German engine range | TM |
| German transmission | TT |
| Transit range | VB |

Parts List (Bill of Material) summary

The list of parts is arranged in the following order:

| System | Sub-System | Description |
|--------|--------------|---------------------------------|
| 00.02 | | Jack Tools & Misc. Safety Items |
| 01.00 | 01.00.1 | Body System |
| 01.00 | 01.00.1 | Body System |
| 01.00 | 01.00.1 | Body System |
| 01.01 | 01.01.1/3 | Body Structure |
| 01.01 | 01.01./3/4/6 | Body Structure |
| 01.02 | 01.02.2 | Front End |
| 01.03 | | Doors & Mounting |
| 01.04 | 01.04.1 | Head Deck & Mounting |
| 01.04 | 01.04.1/2 | Head Deck & Mounting |
| 01.04 | 01.04.2 | Head Deck & Mounting |
| 01.05 | | Trim |
| 01.05 | | Trim |
| 01.06 | | Heat Control |
| 01.07 | 01.07.5/6 | Body Sealing |
| 01.07 | 01.07.5/6 | Body Sealing |
| 01.10 | | Seat, Seat Trim & Track |
| 01.11 | 01.11.1/3 | Glass Frames & Mechanism |

| System | Sub-System | Description |
|---------------|-------------------|---------------------------------------|
| 04.02 | 04.02.1 | Rear Suspension—Rear Anti-Roll Bar |
| 04.02 | 04.02.1 | Rear Suspension – Wishbone Upper |
| 04.02 | 04.02.1 | Rear Suspension – Wishbone Lower |
| 04.02 | 04.02.2 | Rear Springs |
| 04.02 | 04.02.3 | Rear Hubs, Bearings & Seals |
| 04.02 | 04.02.3 | Rear Hubs, Bearings & Seals |
| 04.03 | | Shock Absorbers |
| 04.03 | | Shock Absorbers |
| 04.04 | | Wheels & Tyres |
| 05.01 | | Driveshaft |
| 05.01 | | Driveshaft |
| 05.02 | | Rear Drive Axle |
| 05.02 | | Rear Drive Axle |
| 05.03 | | Front Drive Axle |
| 06.01 | | Brakes |
| 06.01 | | Brakes |
| 06.01 | | Brakes |
| 06.01 | | Brakes |
| 06.01 | | Brakes |
| 06.01 | | Brakes |
| 06.02 | | Parking Brake |
| 06.02 | | Parking Brake |
| 07.03 | | Manual Transmission |
| 07.03 | | Manual Transmission |
| 07.06 | | Manual Transmission External Controls |
| 07.06 | | Manual Transmission External Controls |
| 07.06 | | Manual Transmission External Controls |
| 07.06 | | Manual Transmission External Controls |
| 07.07 | | Transfer Box |
| 08.01 | | Clutch & Housing |
| 08.01 | | Clutch & Housing |
| 08.02 | | Clutch Controls |
| 08.02 | | Clutch Controls |
| 09.00 | | Exhaust System |
| 09.00 | | Exhaust System |
| 10.00 | | Fuel Tank & Lines |
| 10.00 | | Fuel Tank & Lines |
| 10.00 | | Fuel Tank & Lines |

| System | Sub-System | Description |
|---------------|-------------------|--|
| 10.00 | | Fuel Tank & Lines |
| 10.00 | | Fuel Tank & Lines |
| 11.01 | | Manual Steering |
| 11.01 | | Manual Steering |
| 11.05 | | Steering Column & Wheel |
| 11.05 | | Steering Column & Wheel |
| 11.05 | | Steering Column & Wheel |
| 12.01 | | Body Ventilation |
| 12.02 | | Heating & Distribution |
| 13.02 | | Speedometer |
| 13.03 | | Fuel Gauge |
| 13.04 | | Electrical Power Gauges |
| 13.05 | | Engine Operation Gauges |
| 13.06 | | Horn |
| 13.07 | | Misc. Gauges |
| 14.01 | | Battery Support |
| 14.02 | | Generator/Alternator |
| 14.08 | | Battery Cables & Fixings |
| 14.09 | | Low Tension, Low Current Distribution – Wiring |
| 14.10 | | Low Tension, Low Current Distribution – Switches |
| 15.01 | | Sound Receiving |
| 15.02 | | Radio Aerial |
| 17.01 | | Front Lighting |
| 17.02 | | Interior Lighting |
| 17.03 | | Rear Lighting |
| | | Miscellaneous |